

USER MANUAL

Version: V1.0

 
Precautions



- ◆ Please use the designated accessories/parts.
- ◆ This product uses a 7.4V lithium battery.
- ◆ Please do not forcibly disassemble this product to avoid damaging it.
- ◆ Please do not scratch the fingerprint scanner with sharp objects to avoid permanent damage.
- ◆ Do not expose the product to water leakage or splashing.
- ◆ Please avoid contacting the product with corrosive substances to prevent damage to the protective layer of the casing.
- ◆ For cleaning products, please use a soft cloth to wipe.
- ◆ Do not disassemble the battery during setup operations.
- ◆ After the door lock triggers a low battery alarm, please charge the battery in a timely manner.
- ◆ Do not place the battery near a fire source to avoid explosion.
- ◆ Do not use metal to short-circuit the battery terminals to avoid causing an explosion.


◆ Product schematic

(Installation instructions for use of the picture is for reference only, the product in kind shall prevail!)

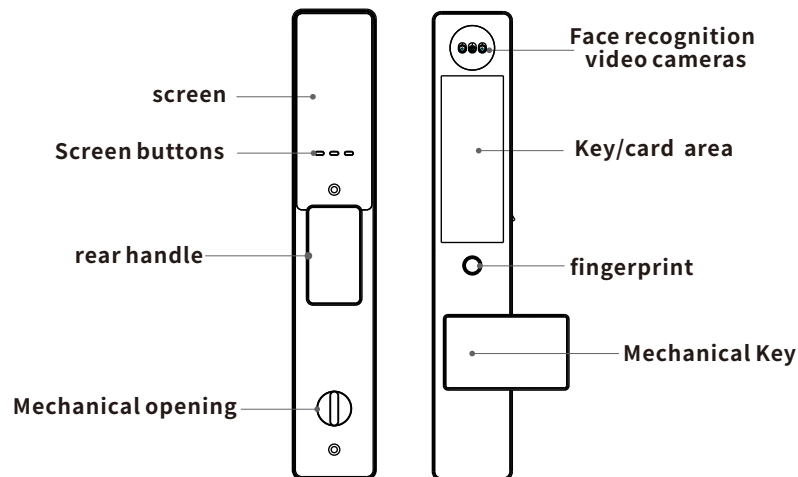


6.1 Installation of lock body

 Install the lock body into the lock body slot, with a heaven and earth hook, hook the heaven and earth hook securely.

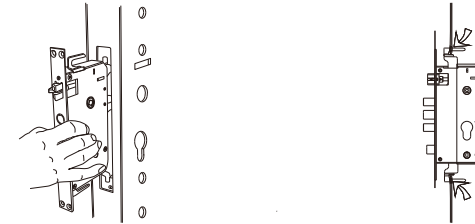


6.2 Install front panel

 According to the schematic diagram, press the front panel and rear sealing plate tightly against the door and fix firmly, install the lock cylinder, and cut the lock cylinder lever if it is too long.

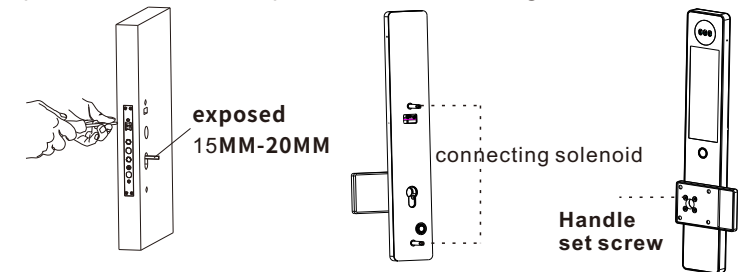

6.3 Install rear panel

 Place the square steel, lock cylinder, and shifter in position, then securely fasten the rear and front panels. Check that all functions are normal, and then place the battery in place to complete the installation.

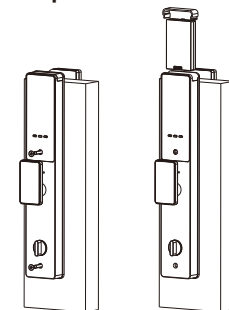

5.1 Graffiti App Operating Instructions

Download

Download Method 1: Search for "Smart Life" in the App Store and Android App Stores.

Download and install;

Download mode 2: Scan the QR code below to download "Smart Life"



Smart Life



Tu ya

APP side operation lock plate connecting connecting network

Open the cell phone APP "Doodle Intelligence", after registering

① First, add a device, click "Add Device_Camera/Lock_Smart Lock (WiFi)";

② Select the WIFI name, and enter the WiFi password, click "Next";

 
③ Operate the remote management network in the lock panel system, select "hotspot", confirm the completion and click "Confirm keyboard light blinking" on the APP terminal;

④ Select "Hot Distribution/Fast Distribution".

⑤ Open the cell phone setting→WIFI→connect the WIFI of SmartLife-XXXX, and switch to the APP side after successful connection.

⑥ Under normal circumstances in about 10-30S can be operated successfully, try to connect in a place with good WiFi signal.

Note: Only support 2.4GHz WiFi band, please check if your router is set to 2.4GHz band.

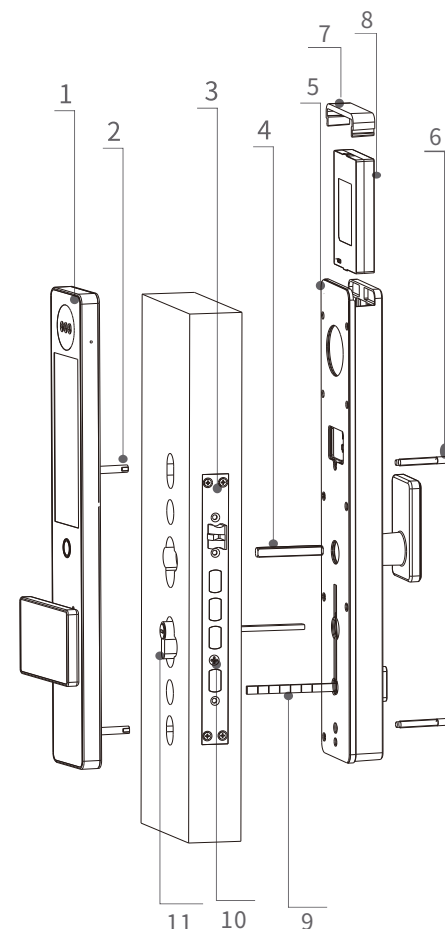

1. Front Panel
2. Connecting screws
3. Lock body
4. Spring square steel
5. Rear panel
6. install screw
7. battery cover
8. lithium battery
9. connecting rod
10. install screw
11. lock cylinder

configuration parameter

power input	DC7.4V	mAh
Under voltage prompt	<DC7.2V	Charging Voltage5V/1A
Emergency interface	5V/2A	TYPE-C
video cameras	200W DPS	screen845*480
face ID	100ID	sense distanceL0.5--1.2 M/H1.2-1.9M
Fingerprint ID	50ID	semiconductor
password ID	200ID	6-12#
card ID	200ID	13.56Mhz
administrators	9个	Total
user	191个	Total
network	WIFI-2.4G	"Smart Life"APP

3.1 Shortcut keys to switch languages

In the initialization state, press the [number combination]+[#] below.
After successful switching, the [operation successful] voice will be broadcasted.

1.English	:555 666 880#	9.Chinese	:555 666 889#
2.Vietnamese	:555 666 881#	10.Türkiye	:555 666 110#
3.Arabic	:555 666 883#	11.German	:555 666 112#
4.Russian	:555 666 884#	12.Kazakhstan	:555 666 118#
5.Thai	:555 666 885#	13.Malaysia	:555 666 120#
6.Spanish	:555 666 886#	14.Italian	:555 666 124#
7.Indonesian	:555 666 887#	15.Portuguese	:555 666 126#
8.French	:555 666 888#		

3.2 Unlocking

Enter the authorized administrators and users who can perform the unlocking action, the Voice prompt: "Verification successful, unlocked".The unlocking action can be performed by "unlocking key" on the rear panel of the door.After unlocking is completed, wait for 10S, during which no more verification operations will be performed.

Note: The initial password is 123456, you can use the initial password to enter the setting or unlocking operation.The initial password is invalidated after adding an administrator.

3.3 Initialization Operations

◆ Method 1: Quick initialization through the rear panel "open/close lock button".
"Unlock button" and "Lock button" interval of one second long press to start initialization, enter the initialization interface, voice prompts "Restore Factory Settings. Please confirm", press ★ to cancel and # to confirm;After confirmation, voice prompt: "Initialization is in progress..." , "Initialization is successful", all contents are cleared; After initialization, any face, fingerprint, card, password (123456) can unlock the door.

 
◆ Method 2: Enter the settings menu to operateBy pressing "★" + "##" button, after verifying that the administrator has passed, enter the setting main menu; Press "4" to select "System Inquiry", the main interface is as follows
1. Record management 2. Storage information 3. Version information 4. Restore factory settings Press the numeric key "4", select "Restore Factory Settings", the voice announces "Restore Factory Settings, please confirm", press # to confirm, the voice prompts: "Initialization is in progress..." "Initialization successful".

Note: All user information is cleared after initialization.

4.1 System settings

◆ Press "★" + "##" button", prompt "Please verify administrator123456";
◆ After successful administrator verification, enter the main interface of the system.
Voice prompts under the main system interface:

1 User Management 2 Remote Management 3 System Settings 4 System Inquiry

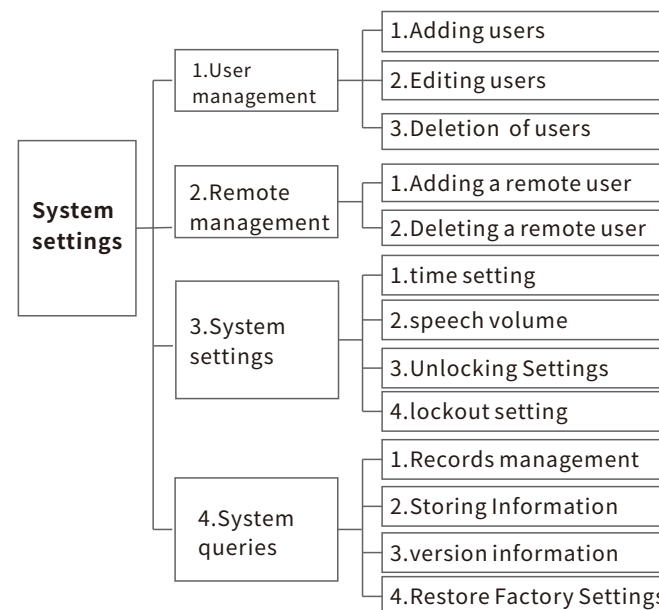

4.2 Factory settings

When no administrator is added, enter "8 8 8" and press the "#" key to confirm and enter the factory setting menu.Voice prompts: 1. motor torque; 2, aging mode

1. Opening direction	1 Left door; 2 Right door
2. Motor torque	1 Low torque; 2 Medium torque; 3 High torque
3. Reversal time	1. 200 ms 2. 400 ms 3. 600 ms 4. 800 ms
4. Aging mode	press "4" to start aging, press * key to exit aging mode